

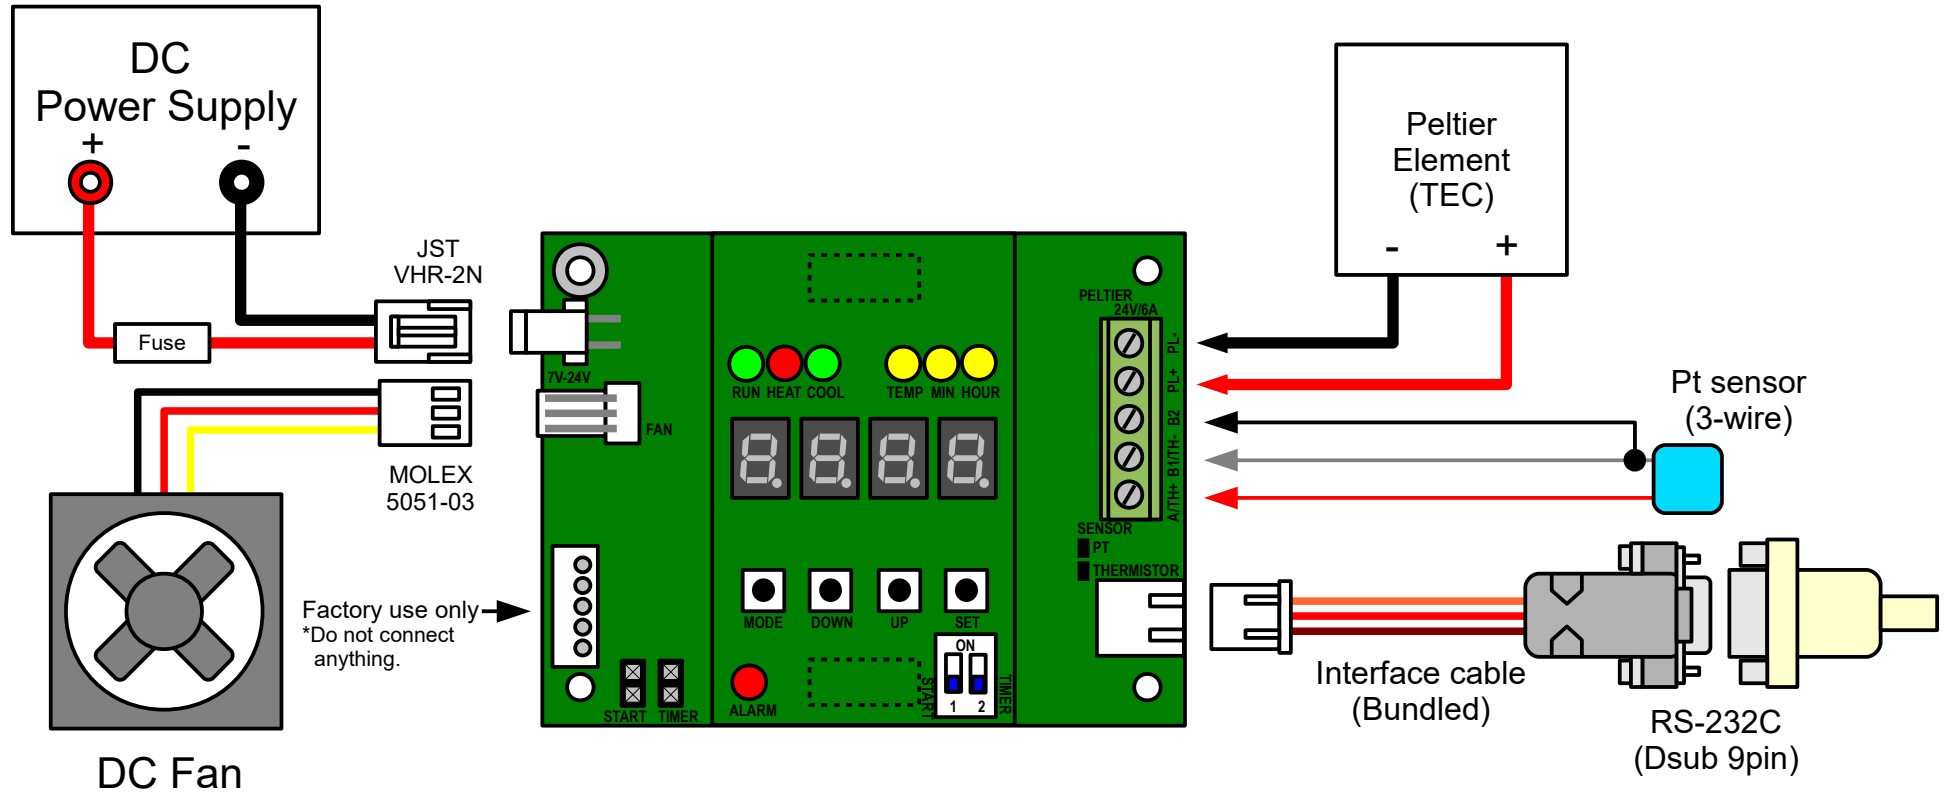




PLC-24V6A CONNECTION GUIDE

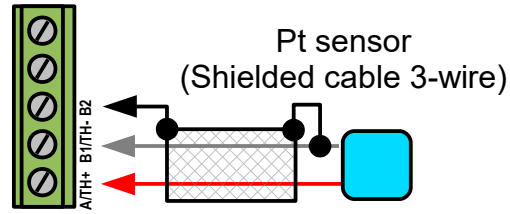

Factory use only
*Do not connect anything.

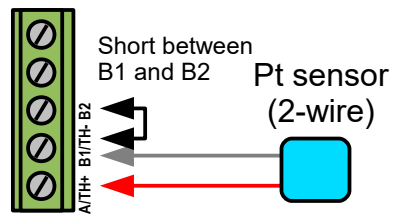

* When the wire length is long, shielded cable is recommended.

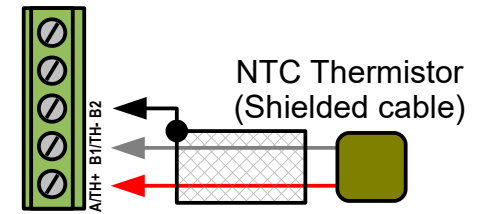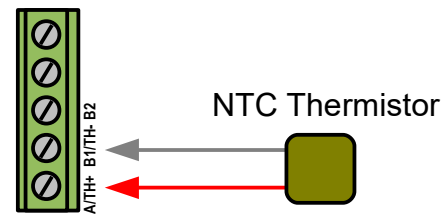

* When the wire length is long, shielded cable is recommended.